



Installation Tips

1. Read the OE Manual, Installation Manual, and Commissioning Manual prior to installing the Smoke and Fire curtain system.
2. Insure you have all of the parts included in your shop drawings.
3. Power down the system by removing the fuse attached to the terminal on the Group Control Panel (GCP) cabinet and remove the back up battery's.
4. Allow a minimum of five minutes between each deployment. The system motors are low voltage and continual cycling of the curtain system can cause over heating of the components as the system is designed to hold with power and release on fire alarm signal.
5. Strap all wires up securely inside the head box using metal straps.
6. Make sure all wires are properly seated inside of the electronics before powering up the Group Control Panel (GCP)
7. Make sure a surge protector is installed in-between the circuit breaker and the Group Control Panel (GCP)



8. Make sure to add the end plates to the bottom bar to secure the Smoke and Fire Curtain to the bottom bar assembly.
9. If the Smoke and Fire curtains are deployed and the red Fire Alarm indicator is beeping call US Smoke and Fire directly to trouble shoot the system before attempting to correct the error yourself to avoid further damage.
10. Use gloves and the correct EH work boots to avoid static charge when performing work on all of the electronics included in the Smoke and Fire System.



Please follow each step listed above to avoid electrical or mechanical issues when installing your Smoke and Fire Curtain assembly.